

MediPaw® Rugged X-Boot Measurement Chart




1

Print & verify the chart:

- Print the Sizing Chart at 100% size.
- Verify the accuracy of this chart with a ruler before measuring.

2

Measure your patient's paw:

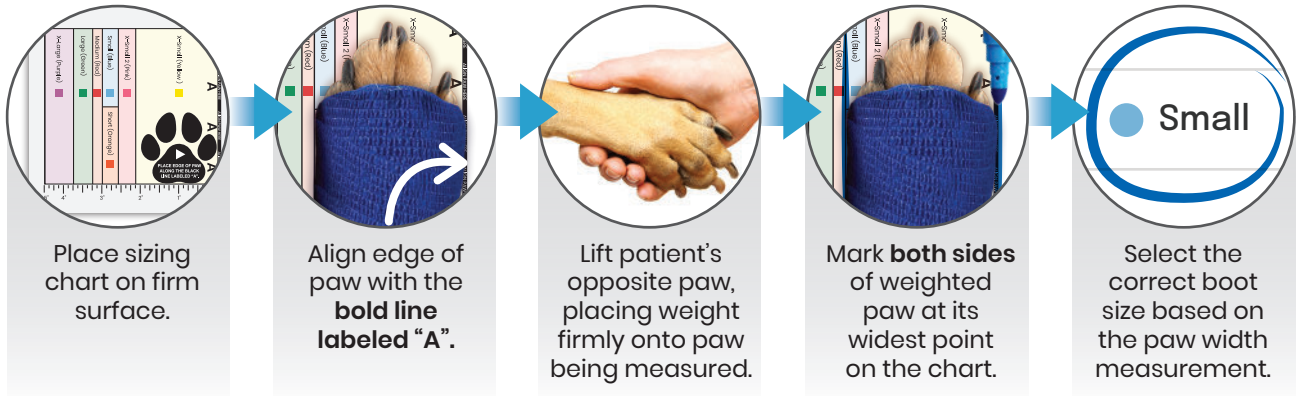

| Bandage width | Boot height | Boot size | Bandage width | Boot height | Boot size |
|--------------------|---------------------|-------------|--------------------|--------------------|-----------|
| 1.75 in (4.445 cm) | 2.5 in (6.35 cm) | ● MX Petite | 3 in (7.62 cm) | 10.5 in (26.67 cm) | ● Small |
| 2 in (5.08 cm) | 6 in (15.24 cm) | ● X Small | 3.25 in (8.255 cm) | 13 in (33.02 cm) | ● Medium |
| 2.5 in (6.35 cm) | 8.25 in (20.955 cm) | ● X Small 2 | 3.75 in (9.525 cm) | 18 in (45.72 cm) | ● Large |
| 3 in (7.62 cm) | 7 in (17.78 cm) | ● Short | 4.5 in (11.43 cm) | 23 in (58.42 cm) | ● XL |

MEASUREMENT TIPS:

- Measure the width of the paw and the bandage (if applicable) to ensure a correct fit.
- If you can't print the chart, draw a line on either side of the patient's on blank paper, measure the width and refer to the chart above.

Questions?

Please contact us!
 info@medivetproducts.com
 P; 800.245.3413
 F: 646.783.3808

www.medivetproducts.com

Protective Boot
 U.S. Patent No: 8,161,668

